



TITAN

user manual

IMPORTANT! PLEASE READ

Thank you for choosing a Nebula device.

Every care has gone into getting this product to you in perfect condition. If you are not 100% satisfied with the product please contact us:- sales@nebulavaporizers.com and we will make it right. Please read this manual and we recommend that you keep in a safe place for future reference. See videos on our website for how to use. www.nebulavaporizers.com



Warning

Device will get hot in the chamber. If device gets too hot to hold stop using immediately. Let the device cool down between sessions.


Do not use for more than 10mins without a cool down.
Do not leave any electrical device unattended while charging.

If the device is not functioning as normal stop use immediately and contact:- sales@nebulavaporizers.com

Disclaimer

The Nebula Titan is not a medical device and is not intended to cure, treat or prevent any diseases or conditions. If you suffer any health problems consult with your doctor before using the vaporizer. This product should not be used by children, pregnant women or anyone with any illness without consulting a doctor. The device is only for use as intended for herbs and concentrates. Do not try and open or tamper with the device as this will void the warranty. **DO NOT USE IF DROPPED OR DAMAGED.**

Overview

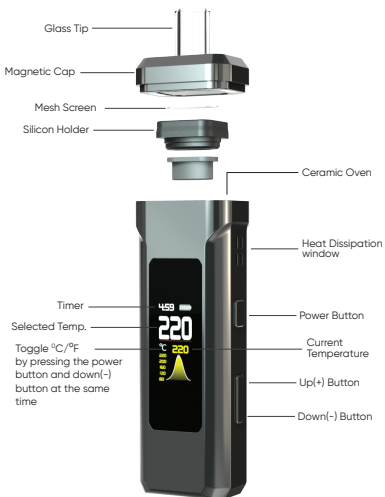

What's Included in the Package



Stainless Steel Wax



Cleaning Brush



Mesh Screen X 2



USB Cable



Cleaning Brush x3



Wax Pick/
Cleaning tools

Specification

Battery Capacity	18650 3.7V 2600mAh
Charging	DC 5V/1A USB C Port
On/Off	Press the power button for 3 seconds
Safety Power Duration	5 mins and 10 mins, OPTIONAL
Oven	Ceramic with embedded heating element
Screen	TFT Display
Temperature Range	100°C - 240°C (212°F - 240°F)
Size	125mm X 35mm X 24mm

Operating Guide

01



Remove
Magnetic Cap

02



Fill the chamber loosely with moderately ground herbs and lightly tamp.

(for extracts, put the wax cup into the ceramic chamber and then fill. Use small amounts to avoid mess).

03



Replace Magnetic Cap

05

04

Quickly press the power button 3 times to turn on the Titan. It will begin to heat immediately.



Quickly press the button 3 times to turn on the device.

POWER BUTTON

Turbo Mode/Power Mode by tapping 2 times of this button while ON

Temperature Route

UP(+) Button

Turn up the temperature

DOWN(-) Button

Turn down the temperature

Timer

4:59

Battery Level



Temperature

220

Selected Temperature

°C

220

Current Temperature



05

Press the "+" button to turn the temperature up and the "-" button to turn the temperature down. The Titan will remember your setting.

06

The graph will change as the temperature changes.



07

To toggle between Fahrenheit (°F) and Celcius (°C), Press the power button and down (-) button at the same time for 2 secs.



08

To toggle the amount of time you can vape for between 5 & 10 minutes. Press the power button and the up(+) button at the same time for 2 seconds.




09

To switch between **Turbo** and **Normal mode**:-
Press the power button quickly 2 times to toggle between them.




10

When charging, the screen light up and the battery icon will show the current battery level. Once completely charged, the battery icon will display as full and the screen will turn off after 60 secs.




11

Quickly tap 3 times of the power button to shutdown.




Disassembly of the mouthpiece

Disassemble the mouthpiece into parts as shown below, so you can clean it piece by piece (dip the parts into alcohol for better cleaning).

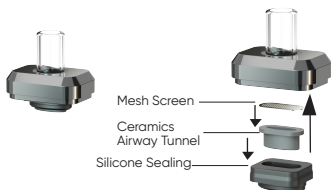

Assembly of the mouthpiece

Press the installation ring into the ceramic lid, then screw the glass tube into the insulation ring carefully. Please operate with care for the fact that it is a glass).

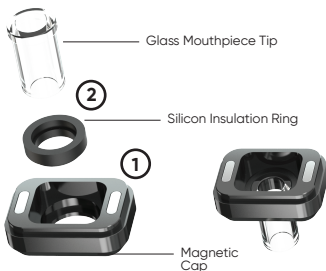

After cleaning, remove any remaining debris using a cotton swab, wait until both pieces dried completely before use.

NOTE

- DO NOT CLEAN OR SUBMERGE THE DEVICE IN WATER.
- DO NOT POUR ANY LIQUID OR OIL INTO THE DEVICE.
- TURN OFF THE DEVICE 30 MINS PRIOR TO CLEANING.
- AFTER USING FOR A 10 MINUTE SESSION LET DEVICE COOL DOWN BEFORE USING AGAIN.

We warrant solely to the original purchaser of the products that within the warranty period (as defined below), the products will be free from defects in materials and workmanship under normal use, and will conform with the company's published specifications of the products. The foregoing warranty is subject to the proper storage, transportation and the use of the product, but does not include defects in batteries, buttons and similar parts subject to wear and tear or deterioration and other special consequential or incidental damages. The customer agrees to accept responsibility for such risks and do not owe the manufacturer, distributors or retailers (including owners and employees) responsible for any incident, injury to persons or damage to property. Upon delivery, the customer should inspect the product immediately for conformity and visible defects. If there is a quality problem, the customer shall give company written notice of any non-conformities or visible defects regarding the products and contact the company in writing concerning return or repair.

Warranty and Limitation

The warranty on the vaporizer begins on the date when the product has been delivered and is valid for one year.

The warranty does not include any damages or miss use which has caused not to function correctly.

If you do not have an issue with your vaporizer then please contact us - **sales@nebulavaporizers.com** and we will respond within one working day.

For faulty devices, we will require the device to be returned and we will issue a replacement device.

The warranty will be void if the device has been tampered with in anyway, damaged or the lack of regular cleaning and maintenance.

**ENSURE YOU CLEAN YOUR VAPORIZER REGULARLY.
ISOPROPYL IS RECOMMENDED, CHANGE MESH
SCREEN REGULARLY.**

For help and support, contact:
sales@nebulavaporizer.com

For videos on how to use and clean:-
www.nebulavaporizer.com

INSTRUCTION MANUALS

- English
- Français
- Deutsch
- Español
- Italiano

WWW.NEBULAVAPORIZERS.COM





NEBULA

TITAN

user manual

IMPORTANT! PLEASE READ